



MERCER


M.33B. MASTER CONTROL PANEL CODE N.14

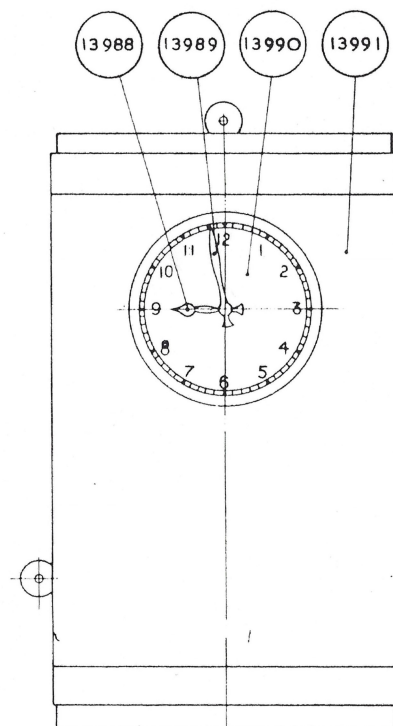

FRONT VIEW

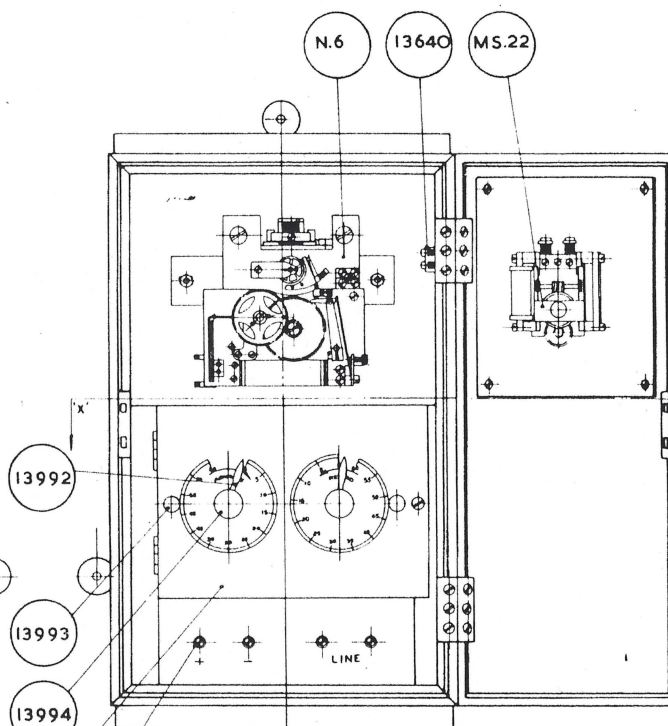


FRONT VIEW WITH DOOR OPEN

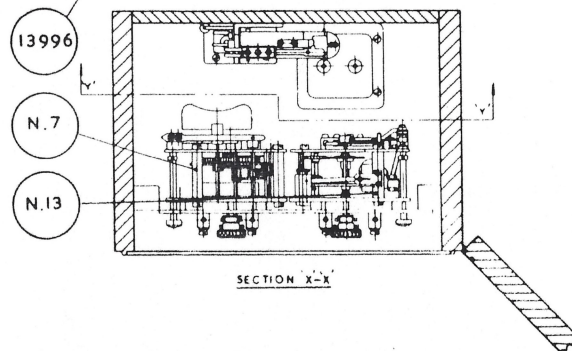

SECTION X-X

PART No.	DESCRIPTION
N.6	ELECTRIC WIND MASTER CLOCK ASSEMBLY — SEE SPARE PARTS LIST N.6
N.7	ADVANCE MECHANISM ASSEMBLY — SEE SPARE PARTS LIST N.7
N.13	RETARD MECHANISM ASSEMBLY — SEE SPARE PARTS LIST N.13
MS.22	SILENT IMPULSE MOVEMENT ASSEMBLY — SEE SPARE PARTS LIST MS.22
13640	DUAL UNIVERSAL CONNECTOR
13988	HOURLY HAND & BOSS
13989	MINUTE HAND & BOSS
13990	DIAL
13991	CONTROL PANEL CASE
13992	ADVANCE & RETARD POINTER ASSEMBLY
13993	PRESS BUTTON KNOB
13994	ADVANCE & RETARD KNOB
13995	ADVANCE & RETARD MOUNTING PANEL
13996	TERMINAL
13998	RELAY CONTACT — (1 SET)
13999	RELAY COIL ASSEMBLY WITH BLADE & ARMATURE
14000	RELAY ASSEMBLY — COMPLETE
14001	CONDENSER — 1 M.F.D.
14002	CONDENSER — 2 M.F.D.
A	UNIVERSAL CONNECTOR STRIP
B	RESISTANCE

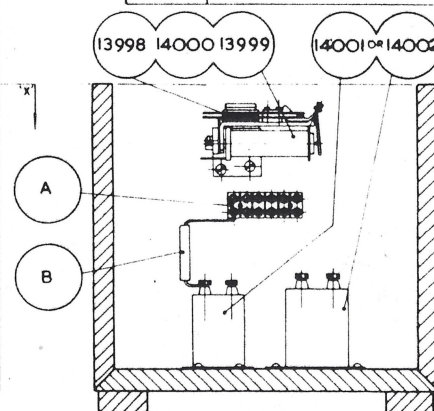

SCRAP VIEW — SECTION Y-Y

WHEN ORDERING SPARES — QUOTE:—
 PART No. 14001 & 14002 CAPACITY REQUIRED
 PART 'A' — No. CONNECTIONS REQUIRED
 PART 'B' — VALUE OF RESISTANCE
 IMPORTANT — QUOTE THE NAME OF VESSEL FOR WHICH SPARES ARE REQUIRED

THOMAS MERCER LTD.
 ST. ALBANS,
 ENGLAND.

SPARE PARTS LIST No. N.14